
NOMAD NEST - MIDI • INSTALLATION

Thank you for choosing a The Camper Company product. Installation is simple, but please read these instructions first. Check all components are present and park on level ground. Two people are recommended for easier installation.

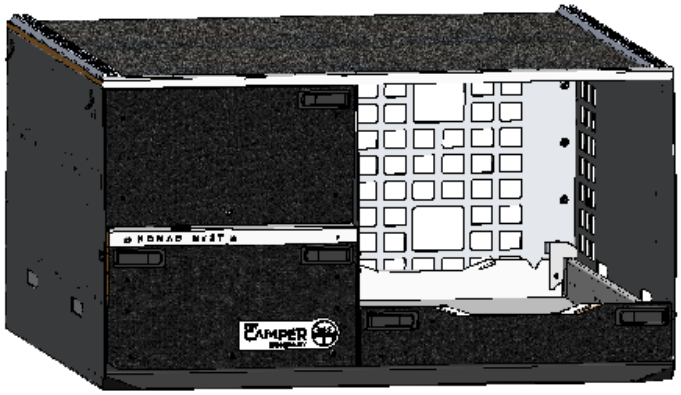

01 GET ORGANISED


IN THE BOX		!! READ ME !!
• Drawer System • Fridge Straps (x 2) • Tie down Straps (x 4)* • Cargo Anchors (x 4) • Bamboo Worktop • Single Gas Burner • Cutlery Tray		**NOTE:** The Camper Company will not be responsible for any damage caused by the failure to install the product according to these instructions. Please call us if you have any questions about the installation of this product. *** if applicable**

WARNING

All The Camper Company products must be properly assembled and securely attached to your vehicle. Incorrect installation or attachment may result in damage, injury, or an accident. You are responsible for ensuring that the product is correctly installed and securely attached. Check all attachments before use and regularly inspect the product for wear, damage and secure fitment. Please read and understand all supplied installation instructions, warnings and precautions before use. If you are unsure about the installation process or do not have the necessary mechanical experience, have the product installed by a qualified professional. Failure to follow these instructions may result in property damage or serious injury.


© COPYRIGHT 2026 THE CAMPER COMPANY

02 INSTALL NOMAD NEST - MIDI

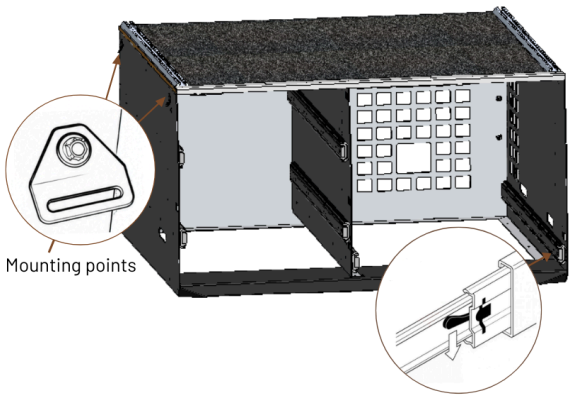


REMOVE DRAWERS:

1. Remove all drawers from the unit before installing it in the vehicle.
2. Detach the drawer rail from the centre rail by pushing the plastic clip upwards or downwards, depending on the side, as shown in the illustration.
3. Locate the strapping mounts/brackets to secure the drawer unit to the vehicle's mounting points.

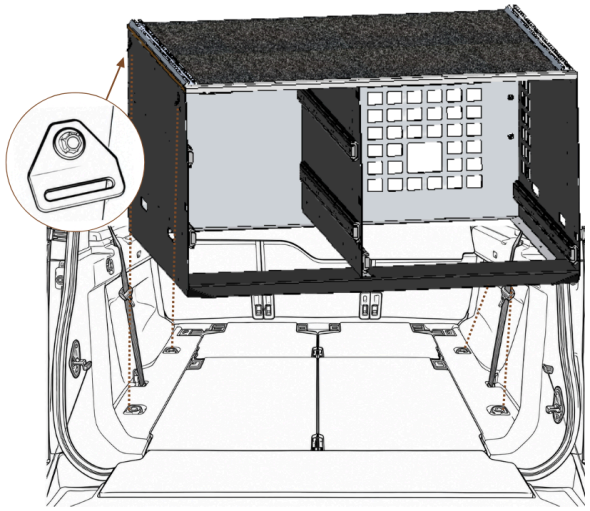

SECURING THE UNIT: WITH STRAPS

1. Place the unit inside the vehicle and adjust its position by moving the unit either forward, backwards or to the sides for a perfect fit.
2. Secure the drawer system to the vehicle's tie-down points using straps. Where possible, cross the straps in an X-pattern for added stability.
3. Ensure the straps are securely tightened and tie off any excess strap to prevent loosening.

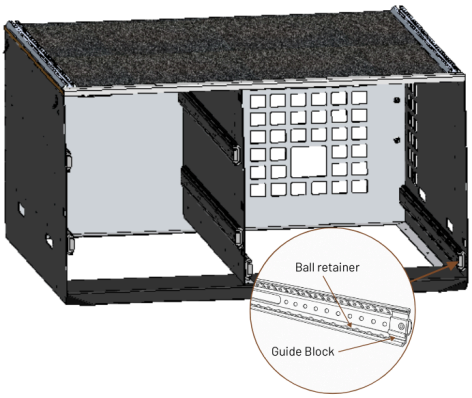

INSERT DRAWERS:

1. Reinstall the drawers by using the plastic guide block to align the drawer rail with the centre rail.
2. Ensure the ball retainer is positioned fully forward before installing the drawer to prevent damage to the ball bearings.

03 TIME TO UNBOX ADVENTURE!

© COPYRIGHT 2026 THE CAMPER COMPANY